

RGBW Manual of digital Paer (1)

1. Display board.

After power on, press manu to enter the main menu, press up or down to select submenu, and press enter to confirm.



MANU UP DOWN ENTER

d001	→	d512	→	13CH Pattern
A001	→	A512	→	8CH Pattern
R001	→	R255	→	R Color matching
G001	→	G001	→	G Color matching
B001	→	B001	→	B Color matching
W001	→	W001	→	Strobe
FH01	→	FH99	→	Color selection
CL01	→	CL08	→	Jump
EC00	→	CC99	→	Gradual change
DE00	→	DE99	→	Pulse change
CP00	→	CP99	→	Voice control
SU01	→	SU09	→	

2. Channel table

13CH	Channel value	d001describe	8CH	Channel value	A001describe
CH1	0	R Close	CH1	0-255	Total dimming
	1-255	R open	CH2	0	R Close
CH2	0	G Close	CH2	1-255	R open
	1-255	G open	CH3	0	G Close
CH3	0	B Close	CH3	1-255	G open
	1-255	B open	CH4	0	B Close
CH4	0	W Close	CH4	1-255	B open
	1-255	W open	CH5	0	W Close
			CH5	1-255	W open
			CH6	0-255	Stroboscopic slow to fast
			CH7	0-50	open DMX
				51-100	Program color selection
				101-150	Jump
				151-200	Gradual change
				201-250	Pulse change
				251-255	Voice control
			CH8	0-255	Speed (color, voice)

4. Technical parameters

- Power supply mode, AC220V/110W/150W.
- light source, 36W/108W/180W LED.
- CH, DMX512.
- Sound control, built-in program, master-slave control.
- Stroboscopic, color selection, color change.
- 256High brightness level, More colorful.

