

DMX CHANNELS Eurolite LED B-40

<https://www.steinigke.de/eurolite/>

3 channel mode

<u>Channel</u>	<u>Value</u>	<u>Function</u>
1 Automatic sound	000 – 005	No function
Control programs/	006 – 040	Program 1
	041 – 076	Program 2
	077 – 112	Program 3
	113 – 148	Program 4
	149 – 184	Program 5
	185 – 220	Program 6
	221 – 255	Program 7
2 Auto program speed/ Sound control	000 – 250	Increasing speed of the automatic programs
	251 – 255	Sound control
3 Rotation	000 – 000	No function
	001 – 127	Backwards rotation, with increasing speed
	128 – 128	Stop
	129 – 255	Forwards rotation, with increasing speed

10 channel mode

Channel	Value	Function
1	000 – 255	Intensity setting of the red LEDs (0 – 100%)
2	000 – 255	Intensity setting of the green LEDs (0 – 100%)
3	000 – 255	Intensity setting of the blue LEDs (0 – 100%)
4	000 – 255	Intensity setting of the white LEDs (0 – 100%)
5 Color presets	000 – 005	No Function
	006 – 015	LED group 1
	Red	LED group 2
	016 – 026	Red
	Green	LED group 3
	027 - 037	Blue
	Bleu	Blue
	038 – 048	White
	White	White
	049 – 059	Red
	Red	Green
	060 – 070	Green
	Red	White
	071 – 081	Red
	Blue	White
	082 – 092	Green
	Blue	White
	093 – 103	Red/Green
	Red/Blue	Red/White
	104 – 114	Green/Red
	Green/Blue	Green/White
	115 – 125	Blue/Red
	Blue/Green	Blue/White
	126 – 136	White/Red
	White/Green	White/Blue
	137 – 147	Red/Green
	Red/Green	Red/Green
	148 – 158	Red/Blue
	Red/Blue	Red/Blue
	159 – 169	Red/White
	Red/White	Red/White
	170 – 180	Green/Blue
	Green/Blue	Green/Blue
	181 – 191	Green/White
	Green/White	Green/White
	192 – 202	Blue/White
	Blue/White	Blue/White
	203 – 213	Red/Green/Blue
	Red/Green/Blue	Red/Green/Blue
	214 – 224	Red/Green/White
	Red/Green/White	Red/Green/White
	225 – 235	Green/Blue/White
	Green/Blue/White	Green/Blue/White
	236 – 246	Red/Green/Blue
	Red/Green/Blue	Red/Green/White
	247 - 255	Red/Green/Blue/White
	Red/Green/Blue/White	Red/Green/Blue/White
6 Master dimmer	000 – 255	Total brightness (0 – 100%)
7 Strobe – LEDs	000 – 005	No function
	006 – 250	Strobe frequency with increasing speed
	251 – 255	Sound control strobe
8 Laser	000 – 005	No function
	006 – 046	Laser red
	047 – 087	Laser green
	088 – 128	Laser red + green
	129 – 169	Laser red strobe + green
	170 – 210	Laser red + green strobe
	211 – 255	Laser red + green strobe alternating
9 Strobe – Laser	000 – 005	No function
	006 – 250	Strobe frequency with increasing speed
	251 – 255	Sound control strobe
10 Rotation	000 – 000	No function
	001 – 127	Backwards rotation with increasing speed
	128 – 128	Stop
	129 – 255	Forwards rotation with increasing speed

22 channel mode

Channel	Value	Function	
1	000 – 255	Intensity setting of the red LEDs (0 – 100%)	LED group 1
2	000 – 255	Intensity setting of the green LEDs (0 – 100%)	
3	000 – 255	Intensity setting of the blue LEDs (0 – 100%)	
4	000 – 255	Intensity setting of the white LEDs (0 – 100%)	
5 Strobe LED group 1	000 – 005	No function	
	006 – 250	Strobe frequency with increasing speed	
	251 – 255	Sound control strobe	
6	000 – 255	Intensity setting of the red LEDs (0 – 100%)	LED group 2
7	000 – 255	Intensity setting of the green LEDs (0 – 100%)	
8	000 – 255	Intensity setting of the blue LEDs (0 – 100%)	
9	000 – 255	Intensity setting of the white LEDs (0 – 100%)	
10 Strobe LED group 2	000 – 005	No function	
	006 – 250	Strobe frequency with increasing speed	
	251 – 255	Sound control strobe	
11	000 – 255	Intensity setting of the red LEDs (0 – 100%)	LED group 3
12	000 – 255	Intensity setting of the green LEDs (0 – 100%)	
13	000 – 255	Intensity setting of the blue LEDs (0 – 100%)	
14	000 – 255	Intensity setting of the white LEDs (0 – 100%)	
15 Strobe LED group 3	000 – 005	No function	
	006 – 250	Strobe frequency with increasing speed	
	251 – 255	Sound control strobe	
16 Color presets	000 – 005	No function	
	LED group 1	LED group 2	LED group 3
	006 – 015	Red	Red
	016 – 026	Green	Green
	027 – 037	Blue	Blue
	038 – 048	White	White
	049 – 059	Red	Green
	060 – 070	Red	Green
	071 – 081	Red	Blue
	082 – 092	Green	Blue
	093 – 103	Red/Green	Red/Blue
	104 – 114	Green/Red	Green/Blue
	115 – 125	Blue/Red	Blue/Green
	126 – 136	White/Red	White/Green
	137 – 147	Red/Green	Red/Green
	148 – 158	Red/Blue	Red/Blue
	159 – 169	Red/White	Red/White
	170 – 180	Green/Blue	Green/Blue
	181 – 191	Green/White	Green/White
	192 – 202	Blue/White	Blue/White
	203 – 213	Red/Green/Blue	Red/Green/Blue
	214 – 224	Red/Green/White	Red/Green/White
	225 – 235	Green/Blue/White	Green/Blue/White
	236 – 246	Red/Green/Blue	Red/Green/White
	247 – 255	Red/Green/Blue/White	Red/Green/Blue/White

Channel	Value	Function
17 Master dimmer	000 – 255	Total brightness (0 – 100%)
18 Laser	000 – 005 006 – 046 047 – 087 088 – 128 129 – 169 170 – 210 211 – 255	No function Laser red Laser green Laser red + green Laser red strobe + green Laser red + green strobe Laser red + green strobe alternating
19 Strobe – Laser	000 – 005 006 – 250 251 – 255	No function Strobe frequency with increasing speed Sound control strobe
20 Automatic programs/ sound control programs	000 – 005 006 – 040 041 – 076 077 – 112 113 – 148 149 – 184 185 – 220 221 – 255	No function Program 1 Program 2 Program 3 Program 4 Program 5 Program 6 Program 7
21 Auto program speed / sound control	000 – 250 251 – 255	Increasing speed of the automatic programs Sound control
22 Rotation	000 – 000 001 – 127 128 – 128 129 – 255	No function Backwards rotation, with increasing speed Stop Forwards rotation, with increasing speed