MAINTENANCE

Attention:

- **X** Periodical to maintain the par light
- **%** Check the screw of the spare parts in order to use well
- ※ Clearing the dust and fragments of the inner par light, to keep the inner par light clearly
- **X** Clearing the lens
- More dust, smoke and granular can cause appearance of the par light corrosively, even cause overheated to damage equipment
- **X** Attention:Before take the light apart, please cut the power source.



CAUTION: Take care using this equipment! high voltage-risk of electric shock!!



Clearing

- * Cutting the power source when the light is cool, to move the cover of the light
- We using the vacuum cleaner or the gas from air compressor to remove the dust of the appearance of the par light
- * The lens need clearly once every week, otherwise to reduce the bright.
- **X** The fans need clear once every month, to promise the cool effect.
- Clearing the lens must be take care, because the surface of the lens is easy to damage and cutting, and do not use the liquid to clean
- * The PCB do not use the liquid to clean, must be keep it dry, to avoid short circuit

24PCS LED washer wall LIGHT



USER MANUAL



At first,thank you for purchasing the device. For the sake of safety and regular operation of this projector, please read this manual carefully before using and operating it in order to avoid any personal injury or damage to the device.

WARNING

FOR YOUR OWN SAFETY PLEASE READ THIS USER MANUAL CAREFULLY BEFORE YOUR INITIAL START-UP!



CAUTION: Keep this equipment away from rain, moisture and liquids.



SAFETY INSTRUCTIONS

Every person involved with the installation, operation & maintenance of this equipment should:

- Be competent
- Follow the instructions of this manual



CAUTION: Take care using this equipment! high voltage-risk of electric shock!!



Before your initial start-up, please make sure that there is no damage caused during transportation. Should there be any, consult your dealer and do not use the equipment.

To maintain the equipment in good working condition and to ensure safe operation, it is necessary for the user to follow the safety instructions and warning notes written in this manual.

Please note that damages caused by user modifications to this equipment are not subject to warranty.







ATTENTION: DANGER OF LIFE! RISK OF BURNS! **RISK OF FIRE! RISK OF SHORT CIRCUIT!**

IMPORTANT:

The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual or any unatu horized modification to the equipment.






ATTENTION:

DANGER OF LIFE! RISK OF BURNS! **RISK OF FIRE! RISK OF SHORT CIRCUIT!**

DMX Signal Connection

3-Pin XLR to 5-Pin XLR Conversion			
Conductor	3-Pin XLR Female(OUT)	5-Pin XLR Male(IN)	
Ground/Shield	Pin 1	Pin 1	
Data Compliment (-signal)	Pin 2	Pin 2	
Data True (+signal)	Pin 3	Pin 3	
Not Used		Pin 4-Do Not Used	
Not Used		Pin 5-Do Not Used	

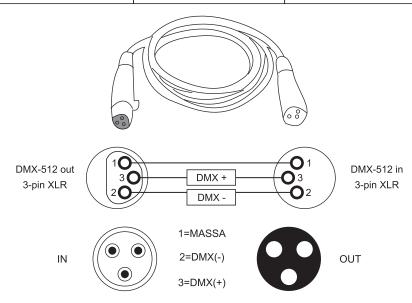

You should find inside the LEDJ carton the following items:

1、LED LIGHT 2、Power cable 3、InstruCtion manual

Technical Specifications:

DMX Channels: 3/6/12/24/48 Voltage: AC 110-240V~50/60Hz 24Ultra bright LED's (RGB)

Operating modes:

- 1. Static color mode 2. Color changing mode 3. Color fade mode 4, Auto run mode
- 5. Sound active mode 6. MasterIslave mode 7、DMX mode

01


DMX 48channels Table:

Channel	Value	Function
1	0-255	All dimming 1
2	0-255	Strobe1
3	0-255	Red 1 0-100%
4	0-255	Green 1 0-100%
5	0-255	Blue 1 0-100%
6	0-255	Auto program1
7	0-255	All dimming 2
8	0-255	Strobe2
9	0-255	Red 2 0-100%
10	0-255	Green 2 0-100%
11	0-255	Blue 2 0-100%
12	0-255	Auto program2
13	0-255	All dimming 3
14	0-255	Strobe3
15	0-255	Red 3 0-100%
16	0-255	Green 3 0-100%
17	0-255	Blue 3 0-100%
18	0-255	Auto program3
19	0-255	All dimming 4
20	0-255	Strobe4
21	0-255	Red 4 0-100%
22	0-255	Green 4 0-100%
23	0-255	Blue 4 0-100%

0-255	Auto program4
0- 255	All dimming 5
0-255	Strobe5
0-255	Red 5 0-100%
0-255	Green 5 0-100%
0-255	Blue 5 0-100%
0-255	Auto program5
0-255	All dimming 6
0-255	Strobe6
0-255	Red 6 0-100%
0-255	Green 6 0-100%
0-255	Blue 6 0-100%
0-255	Auto program6
0-255	All dimming 7
0-255	Strobe7
0-255	Red 7 0-100%
0-255	Green 7 0-100%
0-255	Blue 7 0-100%
0-255	Auto program7
0-255	All dimming 8
0-255	Strobe8
0-255	Red 8 0- 100%
0-255	Green 8 0-100%
0-255	Blue 8 0-100%
0-255	Auto program8
	0- 255 0- 255

Digital display operate:


a). Illustration part:

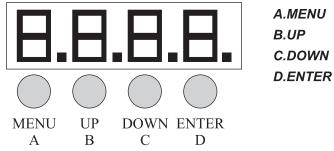

Operation Instructions:

After startign press A(MENU) Enter into main-menu, Press B(UP) C(DOWN) to select the submenu, and then press D(ENTER)ensure.

b).LED Display Function table

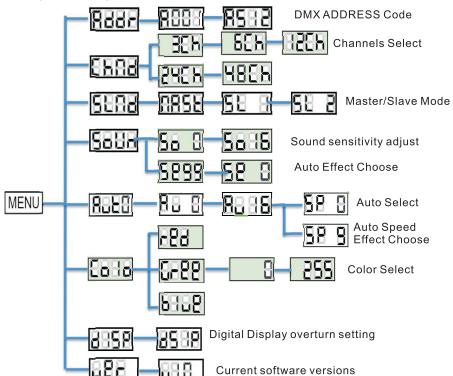

DMX 3channels Table:

Channel	Value	Function
1	0- 255	Red 0- 100%
2	0- 255	Green 0- 100%
3	0-255	Blue 0-100%

DMX 6channels Table:

Channel	Value	Function
1	0-255	All dimming
2	0-255	Strobe
3	0-255	Red 0- 100%
4	0-255	Green 0- 100%
5	0-255	Blue 0-100%
6	0-255	Auto program

DMX 12channels Table:

Channel	Value	Function
1	0-255	All dimming 1
2	0-255	Strobe
3	0-255	Red 1 0-100%
4	0-255	Green 1 0-100%
5	0-255	Blue 1 0-100%
6	0-255	Auto program
7	0-255	All dimming 2
8	0-255	Strobe
9	0-255	Red 2 0-100%
10	0-255	Green 2 0-100%
11	0-255	Blue 2 0-100%
12	0-255	Auto program

DMX 24channels Table:

Channel	Value	Function
1	0-255	All dimming 1
2	0-255	Strobe1
3	0-255	Red 1 0- 100%
4	0-255	Green 1 0-100%
5	0-255	Blue 1 0-100%
6	0-255	Auto program1
7	0-255	All dimming 2
8	0-255	Strobe2
9	0-255	Red 2 0- 100%
10	0-255	Green 2 0-100%
11	0-255	Blue 2 0-100%
12	0-255	Auto program2
13	0-255	All dimming 3
14	0-255	Strobe3
15	0-255	Red 3 0- 100%
16	0-255	Green 3 0-100%
17	0- 255	Blue 3 0-100%
18	0-255	Auto program3
19	0- 255	All dimming 4
20	0- 255	Strobe4
21	0- 255	Red 4 0- 100%
22	0- 255	Green 4 0- 100%
23	0- 255	Blue 4 0-100%
24	0-255	Auto program4

04