



8Heads Moving Head

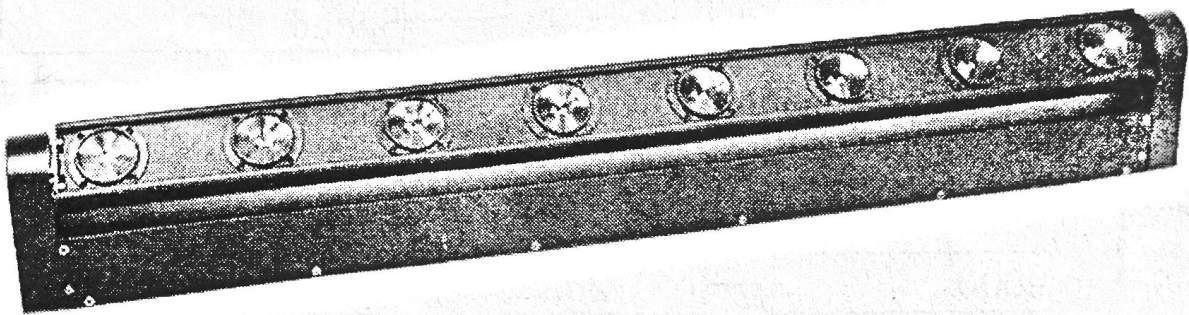

User Manual

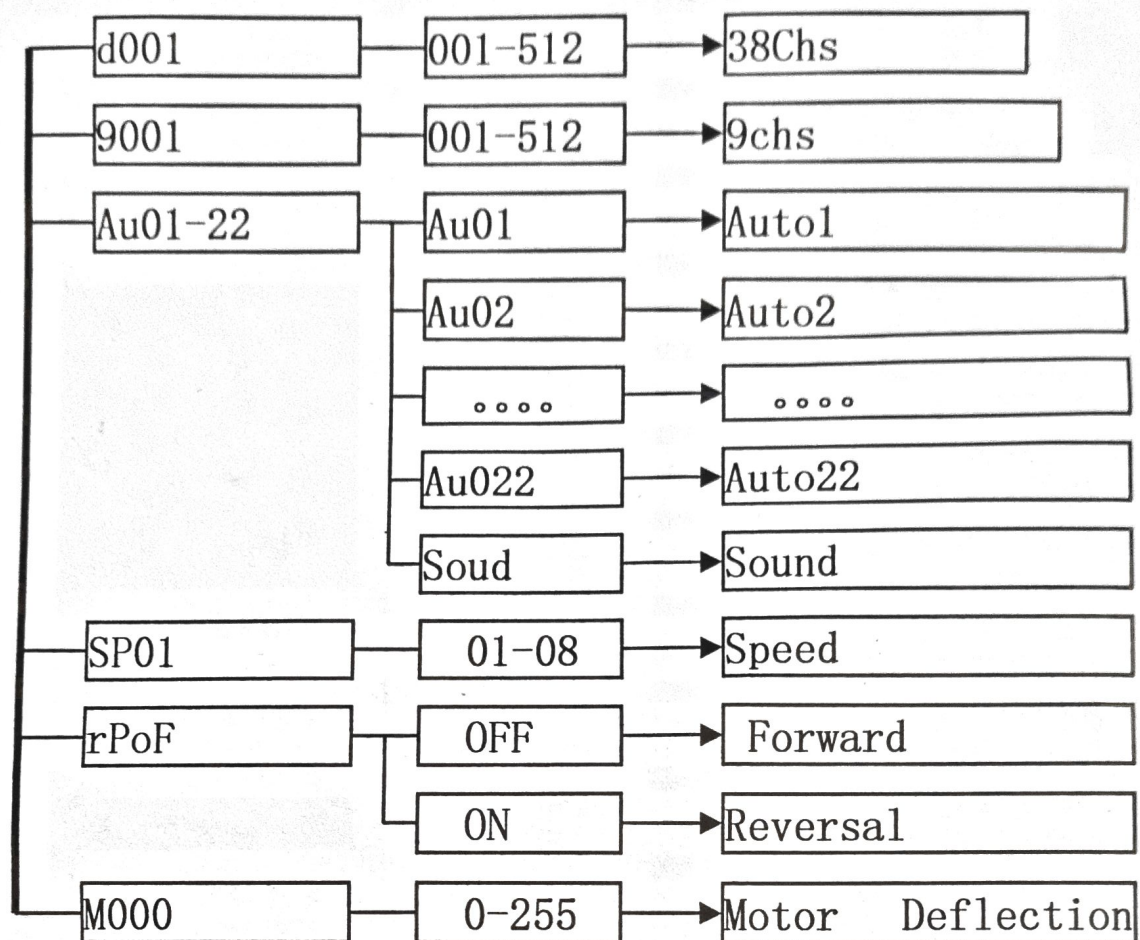

38Chs

Chs	Functions	Instruction
1	X	0-255 X
2	X Speed	0-255 X Speed
3	Inside Effect	Inside Effect
	0-10	5-38 Work
	11-22	Inside Program 1
	21-31	Inside Program 2
	32-42	Inside Program 3
	43-53	Inside Program 4
	54-64	Inside Program 5
	65-75	Inside Program 6

	76-86	Inside Program 7
	87-97	Inside Program 8
	98-108	Inside Program 9
	109-119	Inside Program 10
	120-130	Inside Program 11
	131-141	Inside Program 12
	142-152	Inside Program 13
	153-163	Inside Program 14
	164-174	Inside Program 15
	175-185	Inside Program 16
	186-196	Inside Program 17
	197-207	Inside Program 18
	208-218	Inside Program 19
	219-229	Inside Program 20
	230-240	Inside Program 21
	241-250	Inside Program 22
	251-255	Sound
4	Speed	Speed
5	Dimming	0-255
6	Strobe	0-255 slow to faster
7	BAR1 R Dimming	0-255
8	BAR1 G Dimming	0-255
9	BAR1 B Dimming	0-255
10	BAR1 W Dimming	0-255
11	BAR2 R Dimming	0-255
12	BAR2 G Dimming	0-255
13	BAR2 B Dimming	0-255

14	BAR2 Dimming	W	0-255
.....			
35	BAR8 R Dimming		0-255
36	BAR8 G Dimming		0-255
37	BAR8 B Dimming		0-255
38	BAR8 W Dimming		0-255

9Chs

Chs	Functions	Instruction
1	X	0-255 X
2	X Speed	0-255 X Speed
3	Inside Effect	Inside Effect
4	Inside Effect	Inside Effect Speed
5	Dimming	0-255
6	R Dimming	0-255
7	G Dimming	0-255
8	B Dimming	0-255
9	W Dimming	0-255

Instruction: In master mode , M000function,when M is 000, the motor is inside program , when M is 1-255, the motor is Deflection angle