

注意 · Attention

- 1.在安装使用本设备前，请仔细阅读本手册每项内容。
Please read each item of this manual carefully before installing and using this equipment.
- 2.禁止在未经许可下，传播本手册内容。
It is forbidden to spread the contents of this manual without permission.
- 3.本手册仅为提供有关信息，手册中所有内容会不经通知而随时更改。
This manual is for informational purposes only and all contents of this manual are subject to change without notice.
- 4.除非说明书已说明，否则请不要对本设备随意改造修正。
Unless the instructions have been stated, please do not modify the device at will.

安全提示 · Safety Warning

- 1.灯具在安装及维修前，请确认灯体电源断开，请确保灯具周围环境的通风良好。
Before installing and repairing the lamp, please make sure that the lamp body is disconnected. Please ensure that the environment around the luminaire is well ventilated.
- 2.本灯具是为室内演示而设计，请不要在潮湿的环境下长期使用本产品。
This luminaire is designed for indoor demonstration. Please do not use this product for a long time in a humid environment.
- 3.使用以及维修时应避免本灯具接触水滴，若要用于室外，请做足防水措施。
The lamp should be protected from contact with water droplets during use and maintenance. If it is to be used outdoors, please take adequate measures.
- 4.安装、操作及维修人员必须在熟悉灯具性能后才能开始操作，大多数损坏均是因不熟悉其性能，误操作而导致。
Installation, operation and maintenance personnel must be familiar with the performance of the luminaire before starting operation. Most of the damage is caused by unfamiliarity with its performance and misoperation.
- 5.请不要长时间正视发光体，以免对眼睛造成不适。
Please do not face the illuminator for a long time, so as not to cause discomfort to the eyes.
- 6.请经常用洁净布块擦拭灯具。
Always wipe the fixture with a clean cloth.

产品特点 · Product characteristics

红绿蓝三合一全彩帕灯
Red, green and blue three-in-one full color par light

支持七彩跳变、七彩脉变、七彩渐变和频闪，54颗3W灯珠颜色饱满，灯珠亮度更耀眼，支持声控，自走，多通道模式操作，模式灵活多变。
Support colorful jumps, colorful pulse changes, colorful gradients and strobes, 54 3W lamp beads are full of color, the brightness of the lamp beads is more dazzling, support voice control, Self-propelled, multi-channel mode operation, flexible mode.

BETOPPER®

帕灯
PAR LIGHT

使用说明书 INTRODUCTION MANUAL



适用产品型号
Applicable product model

LPC015/LPC008N
(支持RDM功能Support RDM function)

PAR灯使用说明书


型号/Model: LPC015/LPC008N

使用场所 • Application

使用场所: 婚庆, 演出, 多功能厅, 舞台, 展会, 酒吧。

Application: Wedding Party, performance, multi-purpose hall, stage, exhibition, bars etc.

外型尺寸图 • Dimensional Drawing

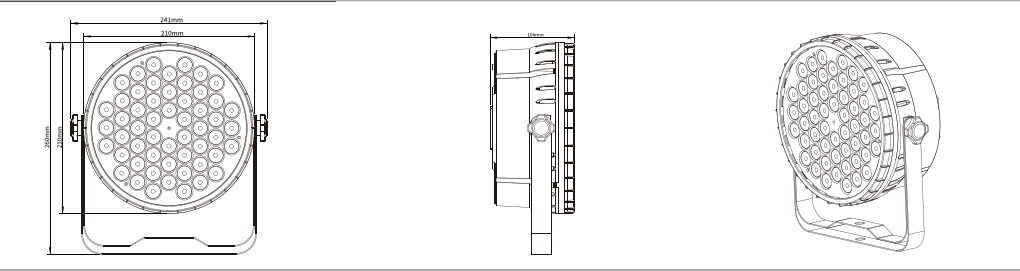

技术参数 • Technical Parameters

型号 / Model	LPC015	LPC008N
光源 / Light source	54*3W(3-IN-1)	54*1.5W(3-IN-1)
额定功率 / Rating power	150W	90W
最大联机数量 / Max link Qty	100V AC/4 220V AC/8	100V AC/7 220V AC/15
净重 / N.W.	1.7KG	
控制模式 / Play mode	自走Auto/声控Sound/DMX/主从联机Master-slave	
通道 / Channel	3/7	
输入电压 / Power supply	AC 100 ~ 240V / 50Hz-60 Hz	
光源寿命 / Source lifetime	50000小时/H	
产品尺寸 / Products size	210*210*104MM	
标配 / Standard Configuration	电源线Power cable/说明书Instruction manual	

*警告: 需采用机器相互供电连接时, 请用户另外购买更换1.0mm^2以上的纯铜线

Warning: when ≥2pcs fixture connected, please change 1.0mm^2 cable with pure copper line material instead of original one.

*警告: 機械を使用して相互に給電する必要がある場合は、1.0mm ^ 2以上の追加を使用してください

7通道模式功能表 • Mode Function Table

通道 / Channel	数值 / Numerical Value	功能 / Function and Description
CH 1	000-255	总调光0%—100%/General dimming0%—100%
CH 2	000-255	红色调光0%—100%/Red dimming0%—100%
CH 3	000-255	绿色调光0%—100%/Green dimming0%—100%
CH 4	000-255	蓝色调光0%—100%/Blue dimming0%—100%
CH 5	000-255	频闪速度慢—快/Strobe speed, From slow — fast
CH 6	000-255	0—50: DMX调光/Dimming; 51—100: 颜色输出/Color output(8种/Types); 101—150: 跳变/Jump change; 151—200: 渐变/shade; 201—250: 脉变/Pulse transform; 251—255: 声控/Sound-activated (CH6与CH7配合使用/use with CH6 and CH7)
CH 7	000-030	声控红色/Sound-activated Red
	031-060	声控绿色/Sound-activated Green
	061-092	声控蓝色/Sound-activated Blue
	093-123	声控暖白色/Sound-activated Warm-white
	124-154	声控黄色/Sound-activated Yellow
	155-185	声控紫色/Sound-activated Violet
	186-216	声控青色/Sound-activated Change
	217-247	声控白色/Sound-activated White
	248-255	声控换色/Sound-activated Change color

3通道模式功能表 • Mode Function Table

通道 / Channel	数值 / Numerical Value	功能 / Function and Description
CH 1	000-255	红色调光0%—100%/Red dimming0%—100%
CH 2	000-255	绿色调光0%—100%/Green dimming0%—100%
CH 3	000-255	蓝色调光0%—100%/Blue dimming0%—100%

功能设置 • Function Setting

功能设置

3通道模式/3Channel mode	DMX512 地址设置
7通道模式/7Channel mode	DMX512 地址设置
红色调光/Red dimming	红色调光, 由暗到亮; Red dimming, from dark to bright;
绿色调光/Green dimming	绿色调光, 由暗到亮; Green dimming, from dark to bright;
蓝色调光/Blue dimming	蓝色调光, 由暗到亮; Blue dimming, from dark to bright;
频闪速度/Strobe speed	频闪速度, 由慢到快; Strobe , speed from slow to fast;
内置颜色/Built-in color	八种颜色输出 Eight color outputs
七彩跳变/Colors jump	七彩跳变, 由慢到快; Colors jump, from slow to fast;
七彩渐变/Colors shade	七彩渐变, 由慢到快; Colors shade, from slow to fast;
七彩脉变/Colors pulse	七彩脉变, 由慢到快; Colors pulse changes, from slow to fast;
声控模式/Voice mode	1-8为七彩声控频闪, 9为七彩声控跳变; 1-8 is a colorful voice-activated strobe, 9 is a colorful voice-activated jump;